


Testing PONs with FlowScout™ PON Optical Power Meter

Power FlowScout On by Pressing Power Button

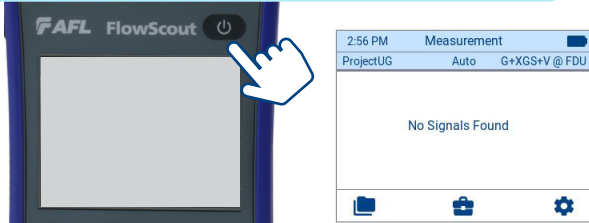


FlowScout powers-up in the Measurement screen and starts measuring as soon as it is connected to the network under test


Prepare Test Jumpers

- Select the appropriate fiber optic test jumpers to connect FlowScout to the network under test
- A test jumper must have the same core and cladding size as the fiber under test
- The connector at one end of the test jumper must mate with the optical port on FlowScout
- The connector on the other end must mate with the fiber optic system under test
- Clean test ports and any mating connectors!

Connect FlowScout to the Network Under Test and Observe the Displayed Measurements

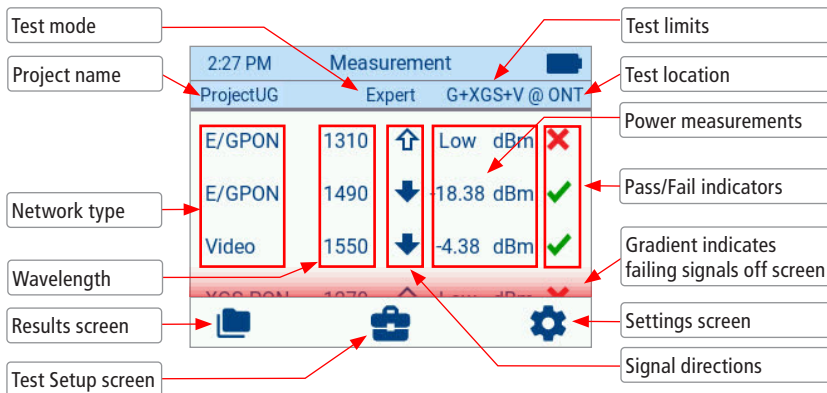

- Observe measurements
- You may touch the desired measurement to see further details in the Details screen

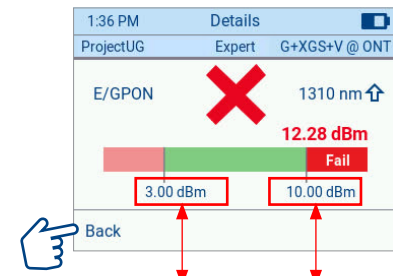


Min Limit value: Minimum passing value for the selected Limits and Location
 Max Limit value: Maximum passing value for the selected Limits and Location

- Observe measurement details
- Touch Back to return to the Measurement screen


Save Results



While in the Measurement screen, press Save

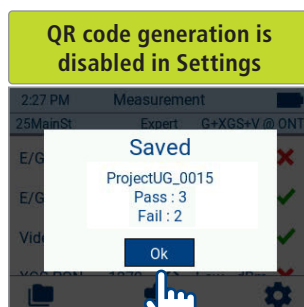

Touch OK to return to the Measurement screen

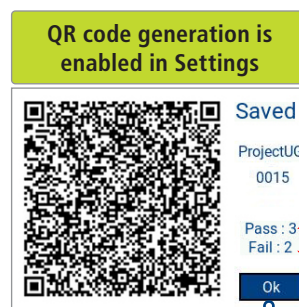

- Project name and fiber number (auto-incremented)
- Number of Passing measurements (if present)
- Number of Failing measurements (if present)

Transfer Saved Results

- Saved results may be transferred to a smart device using QR code functionality. See page 2 for details.
- Results also may be transferred by connecting the FlowScout to a PC using USB cable and copying files to a PC local folder.

Transfer Test Data Using FlowScout™ QR Code Functionality

Note: QR code generation must be enabled in the Settings screen.



While in Measurement screen, press Save



Scan QR code with your smart device camera



On your smart device, you should see a pop-up notification suggesting to open web browser - tap on it




You should now see transferred results that may be shared to a PC or another smart device using your smart device share options

View Saved Test Results




Touch Results

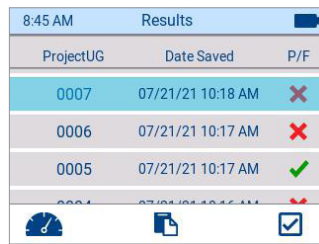


Touch the desired fiber result to display a sub-screen


Touch the desired result to display the Result Detail screen

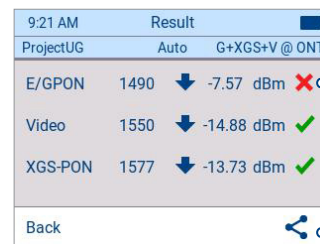


Touch Share to transfer the displayed results via your smart device using QR code functionality (QR code must be enabled in Settings)

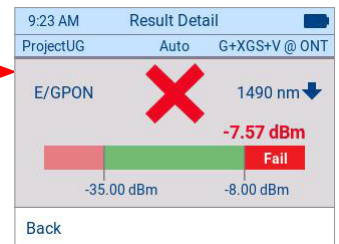

Configure Test Setup

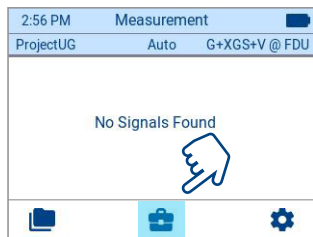


Touch Test Setup

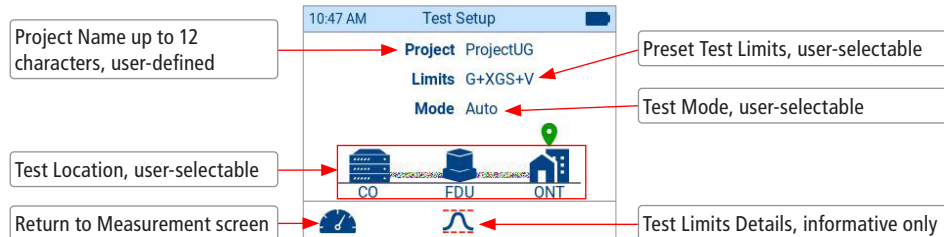


Touch each Setup parameter to configure / select / view


Configure General Settings

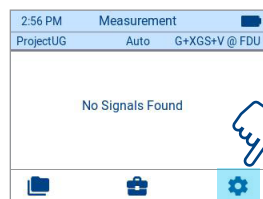

Touch Settings

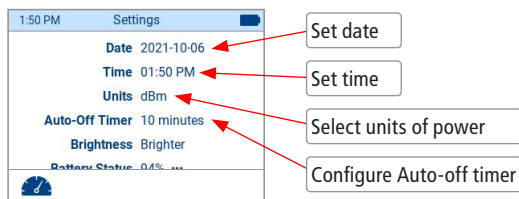

Configure General Settings: Touch the desired settings parameter to view, select, or edit

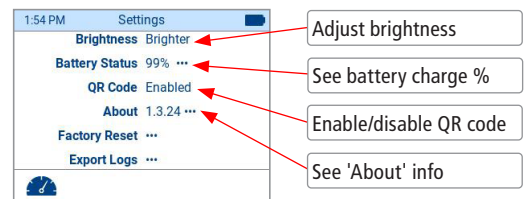

For details, see User's Guide on AFLglobal.com | Questions? Call Customer Support 1 (800) 235-3423