



PRODIGY™ CONVERTER INSTALLATION/ REMOVAL INSTRUCTIONS

1. Remove dust cap as follows: Rotate locking nut 45 degrees in direction shown to remove dust cap stop, and pull off dust cap from Prodigy connector. (Figure 1)

⊛ **NOTE:** Work on a clean surface, taking care to avoid dust contamination of mating surfaces.

2. Install full-size converter as follows: (A) remove converter dust cap, (B) hold onto full-size converter body to keep it from turning, (C) align Alignment Key on Prodigy connector core with alignment guide in converter body (see Alignment Detail), (D) insert connector core all the way in. Turn locking nut 45 degrees in direction shown until it locks into position (E).



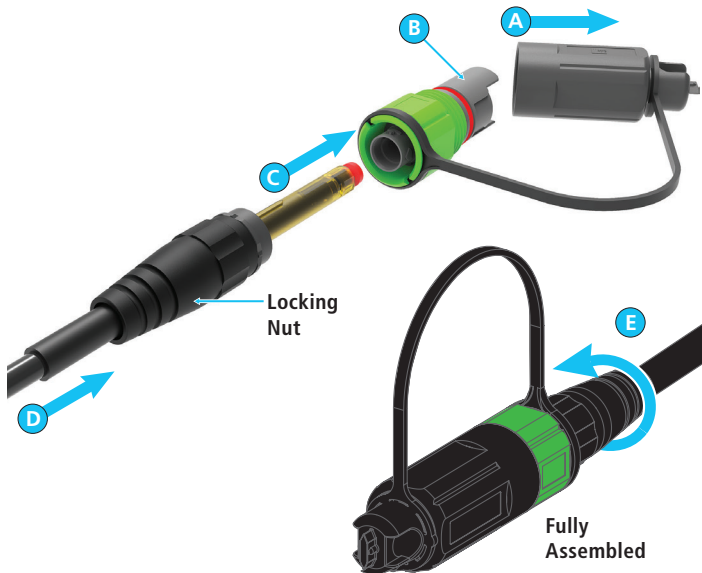


Figure 1

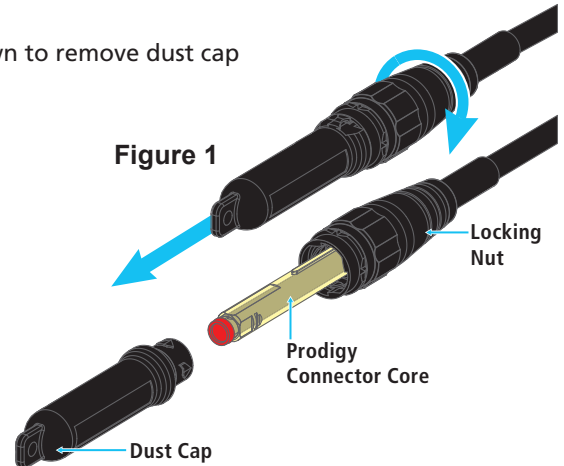

Alignment Detail

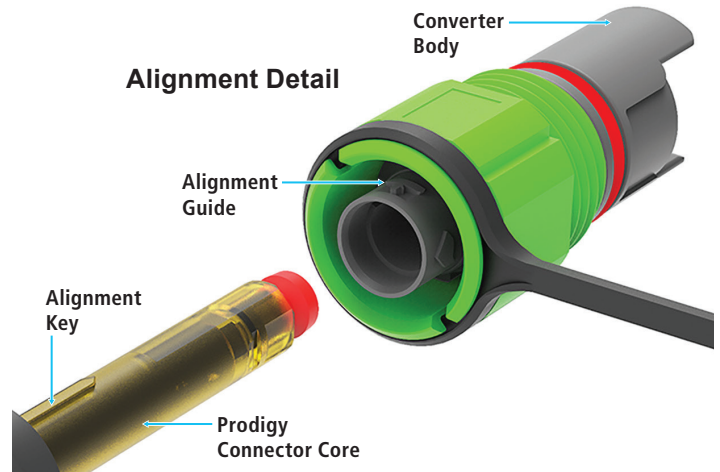


⊛ **NOTE:** Hold converter body stationary while inserting connector core into rear opening of converter, as directed in step 2(C).

Align Prodigy connector using alignment key and alignment guide as shown in Alignment Detail above.


3. Prior to installing Prodigy connector into adapter, remove ferrule dust cap. (Figure 2)

Figure 2

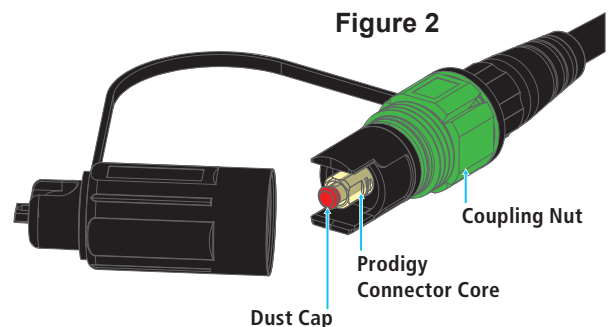

PRODIGY™ CONVERTER INSTALLATION/ REMOVAL INSTRUCTIONS

1. Remove coupling nut as follows: (A) remove dust cap, (B) pull back lanyard to reveal alignment mark, (C) insert and twist dust cap flathead feature to crack coupling nut along break line. If not completely removed, rotate nut 180 degrees, crack nut along break line on other side (D, E).

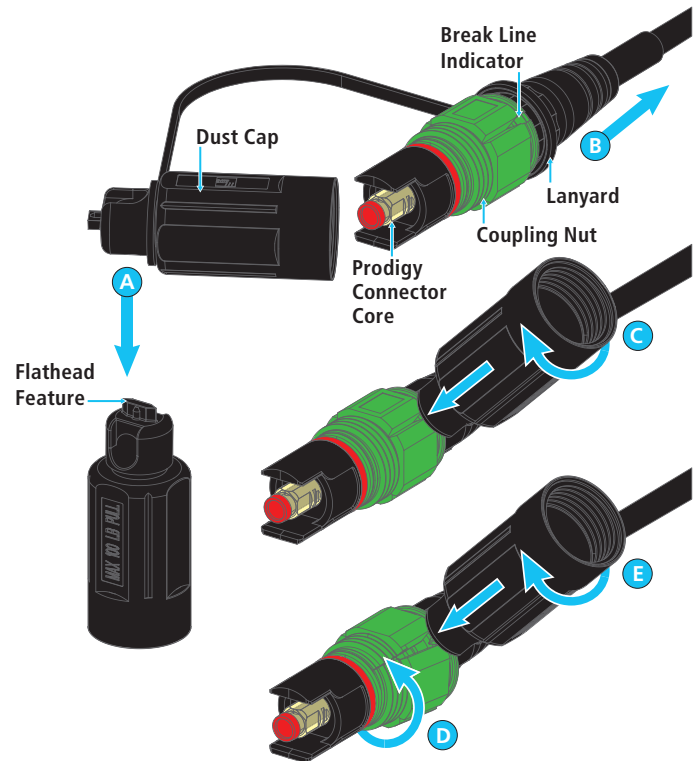

2. Remove the converter from the Prodigy connector core as follows: (A) Press latch down on converter; (B) twist locking nut in indicated direction to unlock converter; (C) pull off converter from Prodigy connector core; discard converter and coupling nut.

