
Installation Instructions

Retrofitting the Opti-Guard with New Splice Trays and Astroguard Hardware Kit

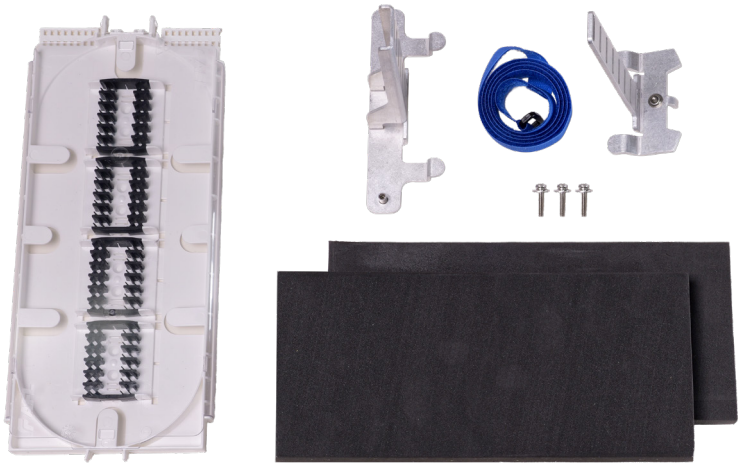

Astroguard Hardware Kit with Tray

Installation Instructions

1. Locate the 3 attachment points and align the top and bottom brackets into their respective positions. **(Figure 1)**
2. Ensure the "tooth" of the upper bracket is seated before and during fastener installation. Install and torque the screws to approximately 20 in-lbs. **(Figure 2)**

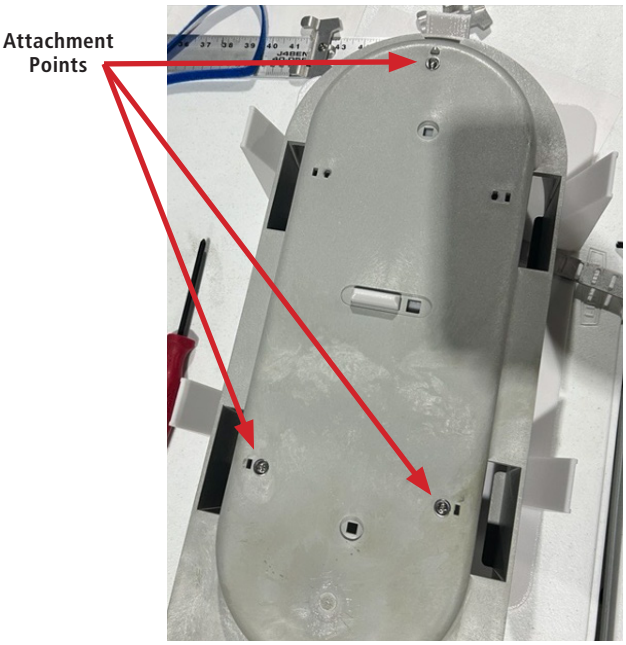


Figure 1

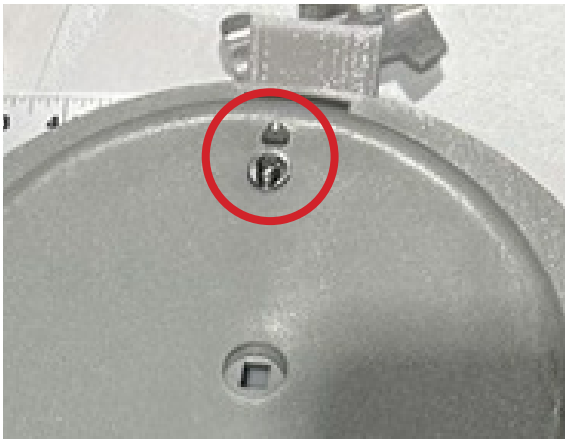


Figure 2

© 2026, AFL, all rights reserved. INS-ACA146, Revision 0, 10.22.2026
Specifications are subject to change without notice.

AFLglobal.com/contact
Sales & Support

3. Feed the provided strap from outside-in through the bottom most slot in the lower bracket; “fuzzy” side down. **(Figure 3)**
4. Feed the strap from the inside-out through the bottom most slot in the upper bracket. **(Figure 4)**



Figure 3



Figure 4

5. Place the two foam pads on either side of the enclosure. **(Figure 5)**
6. Align the trays between the brackets with the open end facing the bottom of the enclosure. **(Figure 6)**
7. Continue adding the required trays until the desired capacity has been achieved. Feed the strap up to and through the required slot (as seen in the following image), over the clear cover of tray towards the bottom bracket, through the respective slots, and secure the strap to itself. **(Figure 7)**

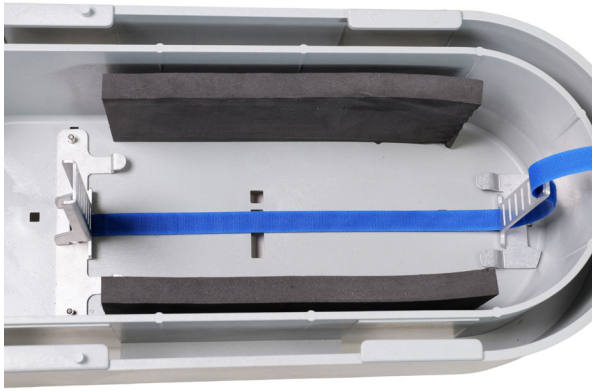


Figure 5

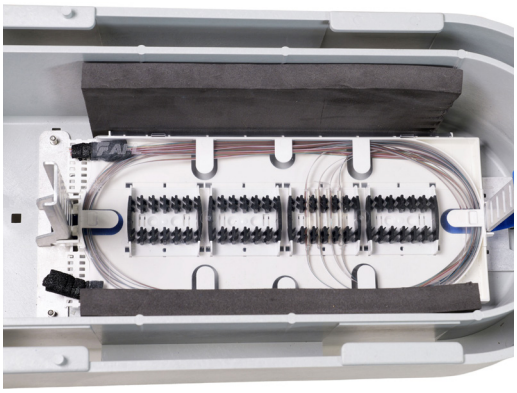


Figure 6

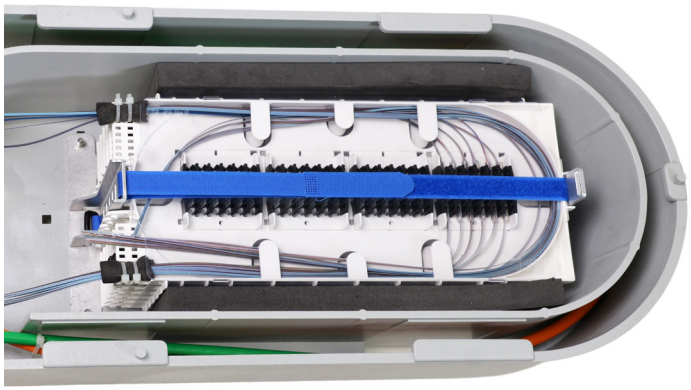


Figure 7

© 2026, AFL, all rights reserved. INS-ACA146, Revision 0, 10.22.2026
Specifications are subject to change without notice.

AFLglobal.com/contact
Sales & Support