


### Longspan Tie with Pad

**NOTE: READ AND UNDERSTAND INSTALLATION INSTRUCTIONS BEFORE INSTALL. ENSURE YOU HAVE THE CORRECT PREFORMED PRODUCT BEFORE INSTALL IS STARTED**

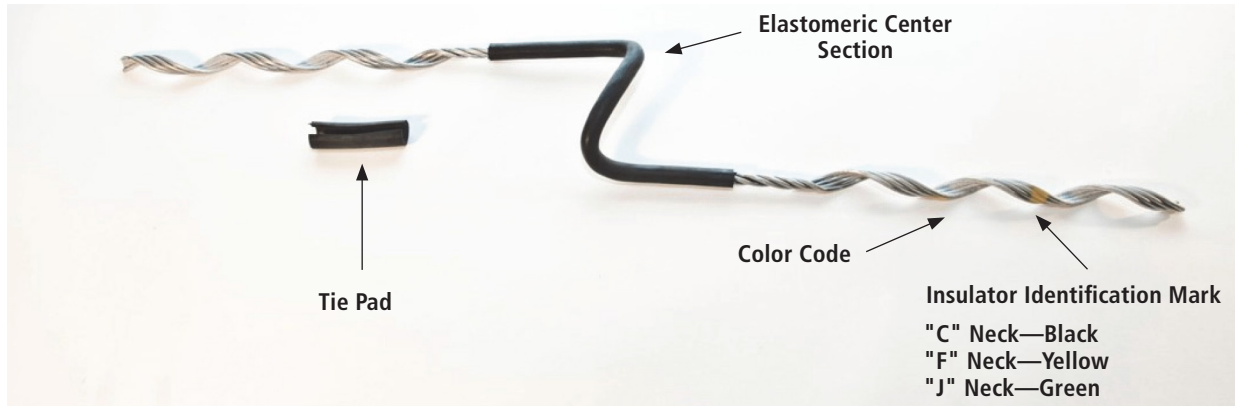

#### Cold Application

1. Apply the Tie Pad to the conductor so the conductor does not come into direct contact with the insulators. Keep the Tie Pad slit facing upward.
3. Install the Longspan Tie over the center of the insulator so that both legs are parallel to the conductor.



2. Bend the Longspan Tie open a little more to make it easier to fall into place and set itself.



4. Rotate the Longspan Tie counter-clock-wise. Ensure both legs go under the conductor. Rotate the Longspan Tie until the legs seat themselves.



*continued*  
→

### Longspan Tie with Pad

5. Bend one leg of the Longspan Tie around the neck of the insulator. Ensure the Tie is firmly seated under the insulator ear.



6. Continue wrapping the Longspan Tie legs until it is completely wrapped.



7. Snap the end of each leg into place. Ensure the Longspan Tie end fully snaps into place. This may require more pressure than the pressure to wrap.



### Safety

1. Longspan Ties are precision devices. They should be stored in covered cartons and handled carefully.
2. This application procedure is NOT intended to supersede any company construction or safety standards. This procedure is offered only to illustrate safe application for the individual. Failure to follow these procedures and restrictions may result in personal injury.
3. For proper performance and personal safety ensure the proper size Longspan Tie has been selected before installation.