

FlexScan Port Saver Installation Instructions

1. Unthread and remove connector adapter from FlexScan OTDR/OTS port.
2. Note whether FlexScan ferrule is UPC or APC (FlexScan APC ports marked with green dot).
3. Select appropriate Port Saver (see Figure 1).
 - Female end must match FlexScan's ferrule type (UPC or APC).
 - Male end must match your launch cable connector type (UPC or APC).
4. Clean FlexScan's ferrule end-face using a One-Click® Cleaner, then inspect using FOCIS Flex.
 - If still dirty, clean with fluid and wipes, then reinspect.
 - If damaged, contact AFL Service to return your FlexScan for repair.
5. Inspect and clean ends of Port Saver using One-Click Cleaner & FOCIS Flex.
6. Install clean Port Saver onto FlexScan's clean, undamaged ferrule.
 - **Note:** Rotate the connector until you feel it click into the alignment slot.
 - Tighten the knurled knob to secure the replaceable connector.
7. Install the interchangeable connector adapter onto the Port Saver.
 - **Note:** Rotate the adapter until you feel it click into the alignment slot.
 - Tighten the knurled knob to secure the adapter.
8. Always clean connector end-faces before connecting a launch cable.




AFL NO.	Port Saver Description	Identifying Color Bands	
		FlexScan Port	Fiber Port
2900-58-0001MR	APC female (FlexScan-facing) to APC male (fiber-facing)	Green	Green
2900-58-0002MR	APC female (FlexScan-facing) to UPC male (fiber-facing)	Green	Blue
2900-58-0003MR	UPC female (FlexScan-facing) to APC male (fiber-facing)	Blue	Green
2900-58-0004MR	UPC female (FlexScan-facing) to UPC male (fiber-facing)	Blue	Blue
2900-58-0014MR	50 µm Multimode UPC to UPC	Teal	Teal

Green band indicates that female end is APC

Blue band indicates that male end is UPC

Female End - FlexScan-facing

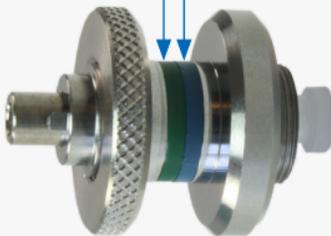

**Male End - Fiber-facing
(Ferrule dust cap is in place)**

Figure 1

www.AFLglobal.com | 800.235.3423

© 2022, AFL, all rights reserved. FSPS-00-1ENG Revision AA 2022-02-03
Specifications are subject to change without notice.