



OptiNID® Duo Quick Start Installation Instructions





Mounting locations
Screw and Strap



Two types of grommets
Circular and U grommets



Drop Cable Preparation with half-piece
of foam tape. See Scales below.

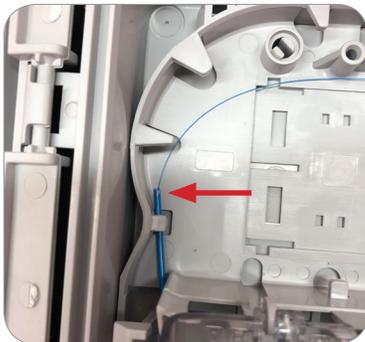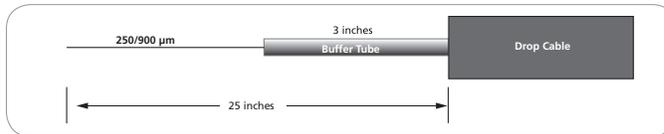

Proper placement of drop
buffer tube




Secure drop cable with
compression connector




Secure drop cable with clip
and grommet



Field-installable connector
installed on drop cable

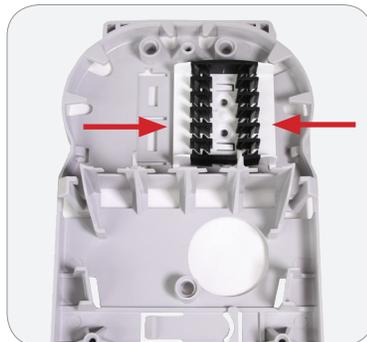


Slide removable splice chip to
disengage or engage into base

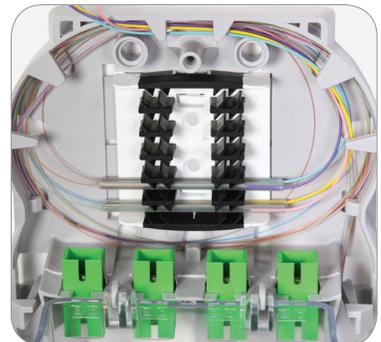


Populated splice chip
single, mass or splitter



OptiNID® Duo Quick Start Installation Instructions

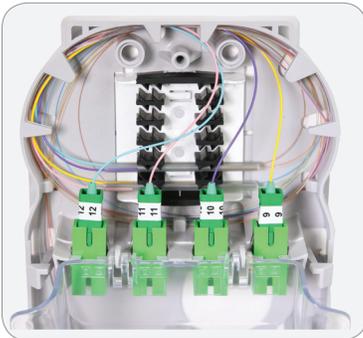


Route spliced 900 μ m pigtail.
Clean and install connector.

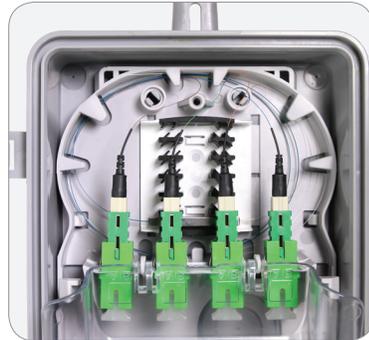

Additional devices may be installed
splitters or filters.



Optional demarcation cover and
optional security screw.

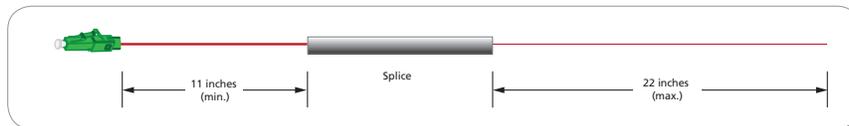

Insert additional SC or LC Adapters.
Install with metal clips in
demarcation chamber.



Clean and install premise drop
connector



Attach foam and tie-wrap to secure
premise drops.



Slide Ground into place to engage
into base



Close and Secure NID Optional screw



QR code for additional information