

FlexApp on iOS Device — Wireless Transfer of FlexScan® FS200/TS100 Results to FlexReports for Easy Reporting

Note: Former FlexScan App users need to remove FlexScan App prior to using FlexApp. Running both Apps on your device can cause data to be sent incorrectly or lost.

On FlexScan 1 Enable Bluetooth to allow pairing

Go to Settings

Tap Bluetooth to display Bluetooth settings

Enable Bluetooth and note FS200/TS100 name

On iOS Device 2 Enable Bluetooth and initiate pairing

From Settings, go to Bluetooth

Enable Bluetooth

Select your FlexScan

Confirm pairing

On FlexScan 3 Finish Pairing

Confirm passkey

On iOS Device 4 Launch App

On FlexApp 5 Log in to FlexReporter-Cloud

Tap cloud to display login to FlexReporter-Cloud

Log in to FlexReporter-Cloud


On FlexApp 6 Files are ready to transfer

Ready to transfer files


FlexApp on iOS Device — Wireless Transfer of FlexScan® FS200/TS100 Results to FlexReports for Easy Reporting

7 Select and transfer test results, file(s) or folder(s), from FS200/TS100 to FlexReporter-Cloud


On FlexScan

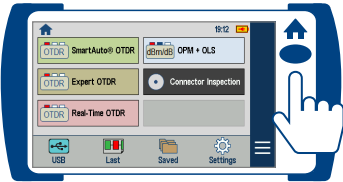


Press Home to return to the Home screen

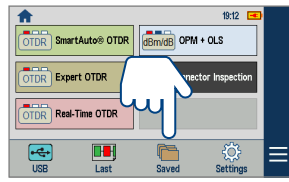


Go to Saved Files

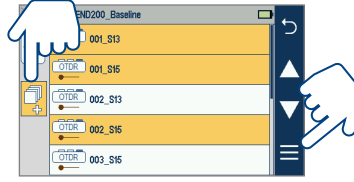

- Touch & hold to select a single file
- Or, touch to select multiple files, then touch 3-bar Menu

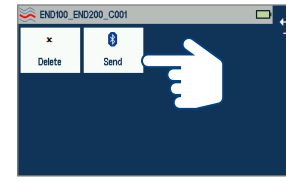

Touch Send to transfer selected files

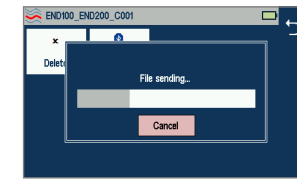

Note transfer progress

On FlexApp




App indicates number of transferred files

8 Downloading Results from FlexReporter-Cloud



On FlexReports



Launch FlexReports Test Results Manager

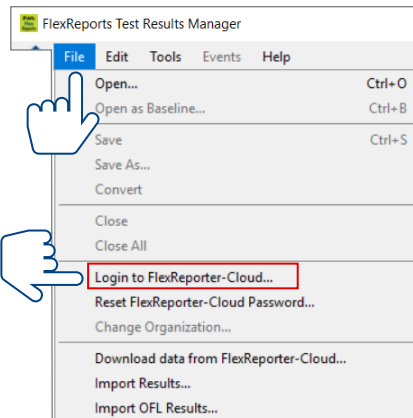

From FlexReports Home screen menu, click File and click 'Log in to FlexReporter-Cloud'

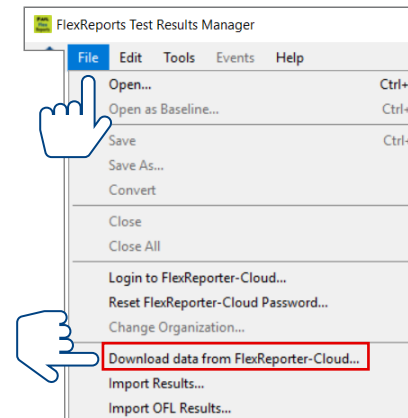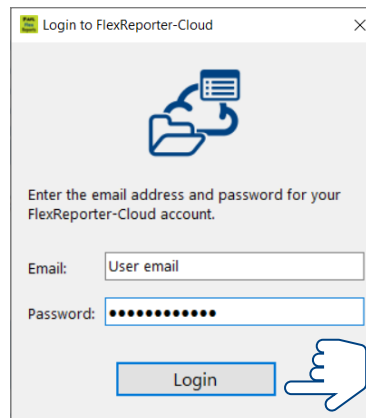

Click 'Download data from FlexReporter-Cloud'. Navigate and select the desired folder with results for download, then click "Download."

