

FlexApp on iOS Device — Wireless Transfer of FlexScan® FS300 Results to FlexReports for Easy Reporting

Note: Former FlexScan App users need to remove FlexScan App prior to using FlexApp. Running both Apps on your device can cause data to be sent incorrectly or lost.

On FlexScan 1 Enable Bluetooth to allow pairing

Go to Settings

Tap Bluetooth to display Bluetooth settings

Enable Bluetooth and note FS300 name

On iOS Device 2 Enable Bluetooth and initiate pairing

From Settings, go to Bluetooth

Enable Bluetooth

Select your FlexScan

Confirm pairing

On FlexScan 3 Finish Pairing

Confirm passkey

On iOS Device 4 Launch App

On FlexApp 5 Log in to FlexReporter-Cloud

Tap cloud to display login to FlexReporter-Cloud

Log in to FlexReporter-Cloud


On FlexApp 6 Files are ready to transfer

Ready to transfer files


FlexApp on iOS Device — Wireless Transfer of FlexScan® FS300 Results to FlexReports for Easy Reporting

7 Select and transfer test results, file(s) or folder(s), from FS300 to FlexReporter-Cloud


Choice I: Enable Auto Save & Send for subsequent tests to auto-transfer results to FlexReporter-Cloud

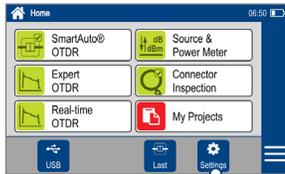


Go to Settings

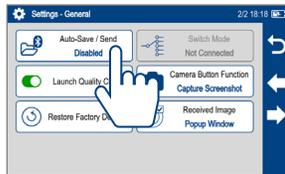

Select Auto-Save/Send

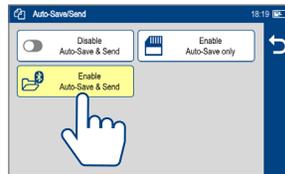

Enable Auto-Save & Send

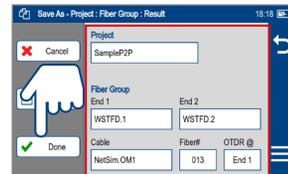


Configure destination, then touch Done




Enabled Auto Save & Send. As subsequent tests complete, results are automatically sent to paired device.



Choice II: Manually select and transfer test results - file(s) or folder(s) to FlexReporter-Cloud

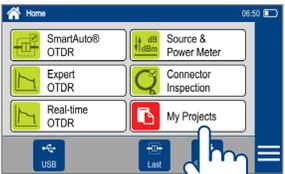

Display Projects

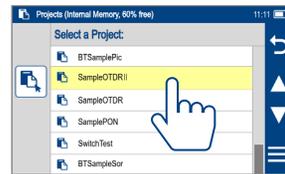


- Touch and Hold to select a test result; Or Touch "Select Files" icon, then touch files or folders to be sent
- Touch 3-bar Menu, then touch Send to transfer selected data.

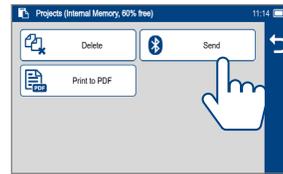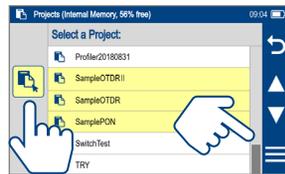

Touch Done


8 Files are ready to transfer

On FlexApp

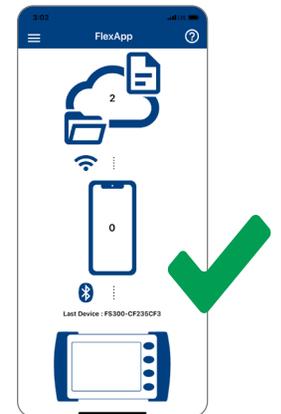


App indicates number of transferred files


On FlexScan Sharing Results and Print to PDF Files from FlexScan: Not logged into FlexReports-Cloud

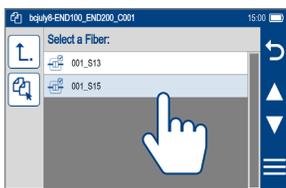


Long press on selected fiber

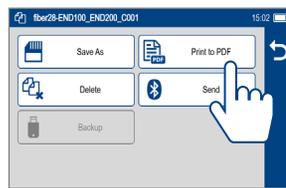


Select Print to PDF

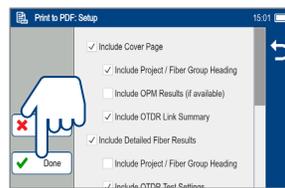

Configure Print to PDF, then select Done

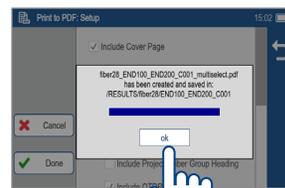

Tap OK

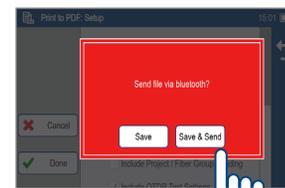

Select Save & Send



Tap Done

FlexApp on iOS Device — Wireless Transfer of FlexScan® FS300 Results to FlexReports for Easy Reporting

On FlexApp | Sharing Results and Print to PDF Files from FlexApp

Note: FlexApp is defaulted to delete files from the device after sending them to FlexReporter-Cloud. Before sharing files from the App make sure you change the settings to keep files on your device.

Tap Menu Tap Settings Deselect the file types to remain on device Tap on smart device icon to access files on device Select file to view Print to PDF report Tap file options Select Share Email report

On FlexReports | Downloading Results from FlexReporter-Cloud

Launch FlexReports Test Results Manager From FlexReports Home screen menu, click File and click 'Log in to FlexReporter-Cloud' Click 'Download data from FlexReporter-Cloud'. Navigate and select the desired folder with results for download, then click "Download"